
# ASSEMBLY INSTRUCTIONS STONE HILL CHANGING TOPPER Model #41065

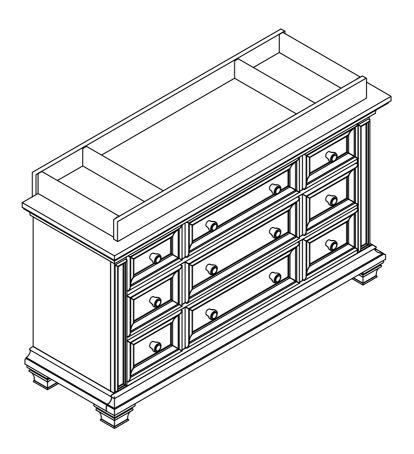




# Thank you for your purchase!

 Remove all parts and hardware from the box and lay on a carpeted or scratch -free work surface.

Do not dispose of any contents until assembly is completed.

# **TOOLS REQUIRED:**

SCREW DRIVER (Not Included)



PARTS ENCLOSED IN CARTON	
A. Changing Topper (1 pc)	
HARDWARE	
(B) Screw 1 1/4"(30 mm) (2 pcs)	
	A. Changing Topper (1 pc)  HARDWARE


Do not fully tighten all screws until all parts are in place.

# **ASSEMBLY OF CHANGING TOPPER**

 
### THIS STEP REQUIRES:

(B) Screw 1 1/4"(30 mm) (2 pcs)

SCREW DRIVER (Not Included)





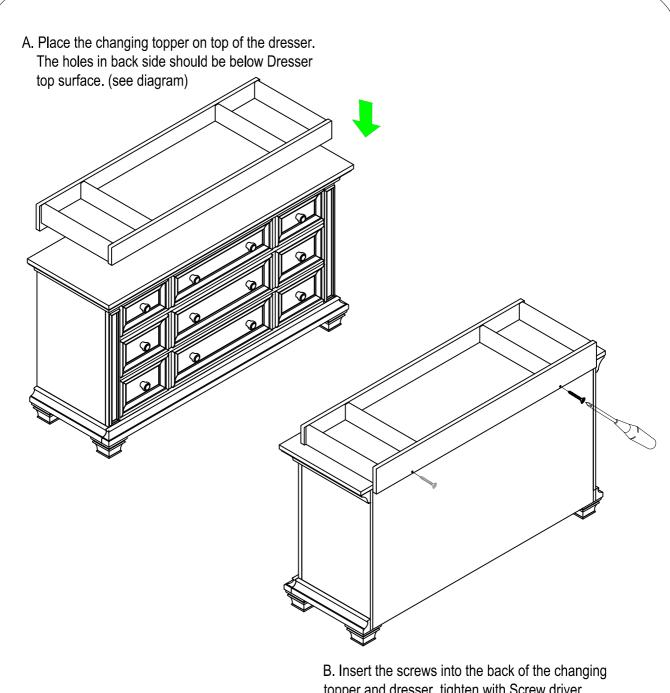

CAUTION: ANY PAD USED IN THIS CHANGING TOPPER MUST BE AT LEAST 16 INCHES BY 32 INCHES (41CM X 81CM) WITH A THICKNESS NOT EXCEEDING 1 INCH (2.54 CM).



• READ ALL INSTRUCTIONS BEFORE ASSEMBLING CHANGING TOPPER.

#### KEEP INSTRUCTIONS FOR FUTURE USE.

- FAILURE TO FOLLOW THESE WARNINGS AND THE ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.
- CAUTION: THE PAD INTENDED FOR USE ON THE CHANGING TOPPER SHALL HAVE MINIMUM DIMENSIONS OF 16 INCHES BY 32 INCHES (41 CM X 81 CM) WITH A THICKNESS NOT EXCEEDING 1 INCH (2.54 CM)
- THE MAXIMUM WEIGHT SHALL NOT BE GREATER THAN 30 LB (13.6 KG).
- DO NOT USE CHANGING TOPPER IF DAMAGED OR BROKEN.
- PLEASE CLEAN THE CHANGING TOPPER WITH A DRY CLOTH AND USE MILD WOOD POLISH IF REQUIRED.

#### **FALL HAZARD**

- TO PREVENT DEATH OR SERIOUS INJURY, ALWAYS KEEP CHILD WITHIN ARM'S REACH.
- ALWAYS SECURE THIS CHANGING TOPPER TO THE CHANGING SURFACE BY ATTACHING IT USING THE SCREWS PROVIDED. SEE INSTRUCTIONS.
- THE SURFACE USED SHOULD BE LEVEL, STABLE AND STRUCTURALLY SOUND WITH MINIMUM SURFACE DIMENSIONS OF 45.25.INCHES (114.93 CM) BY 17.25 INCHES (43.81 CM)